

ASSEMBLY INSTRUCTION



Sunpan Item No: **107098**

Sunpan Product Name: **CHARLIE DINING TABLE - 47"**

Please visit our website www.sunpan.com for more great products.

For assembly questions please call **1-800-787-1019 (or +1-416-736-0094)** outside North America or email to info@sunpan.com

PARTS LIST

Before you begin, please layout all parts and ensure you have the correct count.

NO.	DESCRIPTION	QUANTITY	ILLUSTRATION
A	Top	1	
B	Legs	4	
C	Bolts (Ø6*40mm)	8	
D	Lock Washers	8	
E	Washers	8	
F	Allen Key	1	

ASSEMBLY INSTRUCTIONS

STEP	DESCRIPTION	ILLUSTRATION
1	Attach Leg (B) to Top (A) by using Allen Key (F) to fix Bolt (C), Lock Washer (D) & Washer (E).	<p>The illustration shows a top panel (A) with a central square frame. Four legs (B) are being attached to the corners of the frame. A circular inset provides a close-up view of the attachment point, showing a bolt (C) passing through the leg (B) and the top panel (A). A lock washer (D) and a washer (E) are positioned between the leg and the top panel. An Allen key (F) is shown inserted into the bolt head to tighten it.</p>
2	Assembly completed.	<p>The illustration shows the final assembled product, a round table with a flat top and four legs. The table is shown from a three-quarter perspective.</p>

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.
 Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.
 Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.
 Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.
 Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:
 Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.
 Excessive exposure to sunlight may cause fading.
 Excessive temperature and humidity or cold may cause cracking or splitting.
 Dust with a clean, damp, lint free cloth.
 Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.
 Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.